

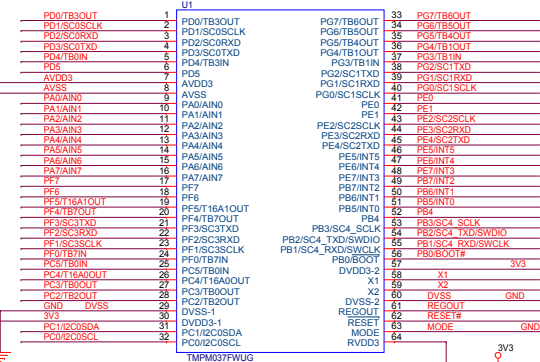


TMP037FWUG

Header

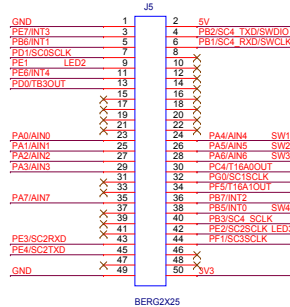


Header

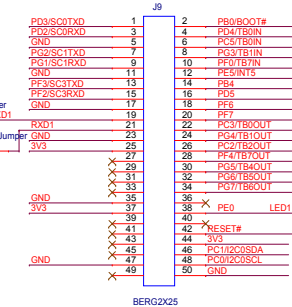


NOTE


- 1) Make short or put 0R resistor across J11 and J13 to use Uart 0 on J3, make sure that J12 and J14 are disabled when using UART 0 on J3.
- 2) Make short or put 0R resistor across J12 and J14 to use Uart 2 on J3, make sure that J11 and J13 are disabled when using UART 2 on J3.
- 3) To use Bluetooth on baseboard disable J11 & J13 on stamp.
- 4) Make short or put 0R resistor across J15 and J16 on stamp to use Uart 1 on J15 of baseboard, to use ZIG Bee on baseboard disable these.
- 5) To use Uart 3 on J16 of baseboard put a jumper on 1st & 2nd pin of J8 & J11(on baseboard), to use WiFi on baseboard put a jumper on 2nd & 3rd pin of J8 & J11(on baseboard).

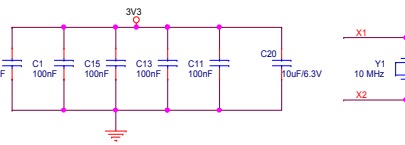


BOOT SECTION

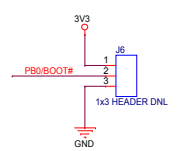


POWER SUPPLY

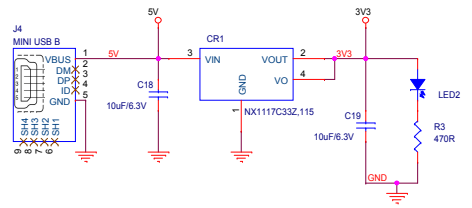


EEPROM SECTION

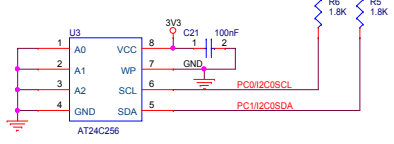


UART SECTION

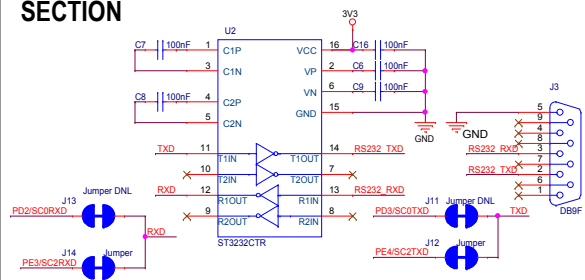


JTAG SECTION

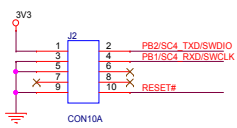

TEST LEDs

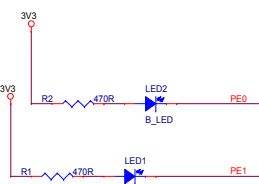

RESET SWITCH

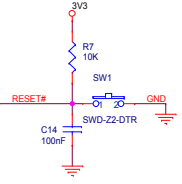

USER SWITCH

